



## **Installation Instructions**

**for**

### **4048-KP or 4036-KP**

5 Inch Extension Kit for ProFlex 4048 or 4036 Door

December 2020

## Installation Instructions for 4048-KP or 4036-KP



✖ **STEP ONE:** Lay the door and frame on a flat surface with the hinges facing up. Saw horses work perfectly.

✖ **STEP TWO:** Remove the threshold. Loosen the 2 button-head screws (on the underside), one on each end of the threshold. You only need to loosen these screws  $\frac{1}{2}$  turn and the threshold will slide off easily.



✖ **STEP THREE:** Remove the door sweep. Remove the 6 button-head screws that hold the sweep in place. Remember to save the 6 screws and the 2 black oval-nuts that will slide out of the 2 channels, you will need them for Step 7. Note the remaining 4 black oval-nuts will remain in the channel for future use if you wish to return the door to its original height.

**✖ STEP FOUR:** Add the 5" door frame extension pieces. These pieces have been preloaded with a plate containing 4 button head screws and 2 black nuts. Slide the 5" pieces onto the bottom of the door frame making sure to put the plate and 4 screws on the underside. (Smooth side of the piece facing up) Tighten screws.

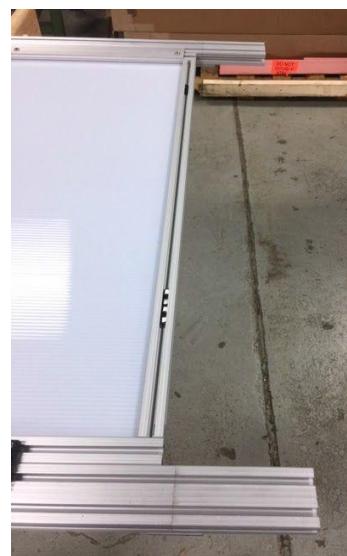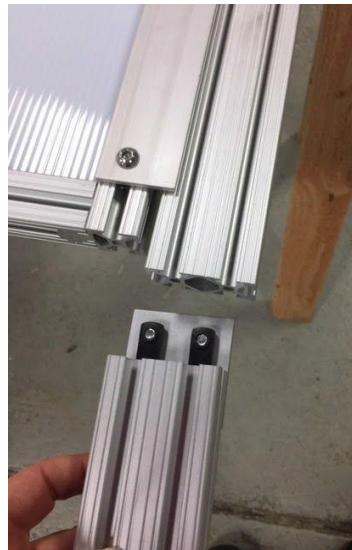

**✖ STEP FIVE:** Add the extension panel to the bottom of the door with 4 mini clamps. Line up the extension panel with the door. The black, oval nuts should be in the lower channel, facing up (you will need these to reattach the door sweep in Step 7). Begin with 2 mini clamps on the front side but do not tighten them too much. On the underside, place a mini clamp directly behind each mini clamp on the front side. Alternately tighten the clamps until the panel is secure and even.



**✖ STEP SIX:** Slide the 5" door seal extension into the channel and tighten

**✖ STEP SEVEN:** Reattach the door sweep. Begin with the 4 screws in the middle and attach the ends with the 2 black, oval nuts and screws that you saved from Step 3. Tighten after all 6 screws are in place.



**✖ STEP EIGHT:** Reattach the threshold. The screws should still have the black, oval nuts in place. These slide into the channels on the underside of the door frame. Tight the screws.



Please reach out if you have any questions. Contact us at 215 322-2205 or [info@proflextbarrier.com](mailto:info@proflextbarrier.com).